


TS . P 80 & TS . P 81: Pneumatic room-temperature controllers

For continuous control (P-controller) of temperature in air-conditioning systems, for residential and business premises. Especially suitable for activating VAV controllers or small valves. Used in conjunction with an RXP 81 scheduling relay, it forms a centrally-controlled individual-room control system. Conforms to the regulations on pressure equipment (97/23/EG Art. 3.3).

Housing 72 × 72 mm of pure-white (RAL 9010); baseplate of black, glass-fibre-reinforced thermoplastic with bimetal sensor and force-balance system; compressed-air connection Rp 1/8 with female thread. Standard version: thermoplastic housing with adjuster knob and variable stops for setpoint limitation; +/- scale.



T03164



Y02125


Type	Control function 1)	Control action	Air capacity I _n /h	Setpoint range °C	Weight kg
TSP 80A F117	fixed-value	A	33	17...27	0.1
TSP 80B F117	fixed-value	B	33	17...27	0.1
TSP 81A F117	fixed-value	A	200	17...27	0.1
TSP 81B F117	fixed-value	B	200	17...27	0.1
TSFP 80A F117	fixed/schedule	A	33	17...27	0.1
TSFP 80B F117	fixed/schedule	B	33	17...27	0.1
TSFP 81A F117	fixed/schedule	A	200	17...27	0.1
TSFP 81B F117	fixed/schedule	B	200	17...27	0.1

Heating-cooling sequence

TSSP 80 F117	fixed-value	A and B	2 × 33	17...27	0.1
---------------------	-------------	---------	--------	---------	-----

	TSP 80, TSFP 80	TSP 81, TSFP 81	TSSP
Air consumption I _n /h	33	20	66
Air exhaust capacity I _n /h 2)	50	34	50
External restrictor required	1 pc	–	2 pc
Dead zone X _t (sequence)	–	–	2 K
Connection diagram	A02044	A02045	A02047
Fitting instructions	MV 23176/23219	MV 23184/23185	MV 23200

Supply pressure 4)	1.3 bar ± 0.1	Time constants (0.2 m/s)	approx. 7 min
Output pressure	0.2...1.0 bar	Permissible ambient temperature	0...55 °C
P-band X _p	approx. 2 K	Dimension drawing	M297350
Linearity	2%	Connection diagram and MV	see table

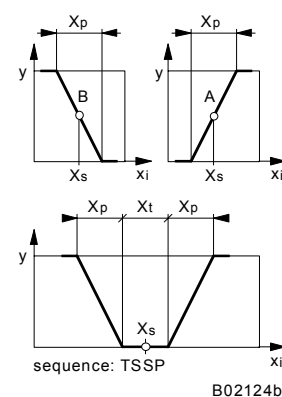

B02124b

Accessories

- 0228234 001*** Setpoint adjustment knob in pure white, with raised bridge
- 0296218 000*** Buckle-proof attachment for plug-in installation
- 0296990 000*** Buckle-proof attachment for screw-in installation, MV 7322
- 0297441 000*** Intermediate cover plate in pure white for various recessed junction boxes
- 0297354 000*** Short screw-in nipple R 1/8, for soft plastic tubing of 4 mm internal diameter
- 0303124 000*** Recessed junction box (in conjunction with [0297441](#), if necessary)
- 0297416 001** Housing cover in pure white, screw-type, without setpoint adjuster 3)
- 0297418 032** Housing cover in pure white, screw-type, with setpoint adjuster, scale 17...27 °C 3)
- 0297419 001** Housing cover in pure white, of light metal, w/o setpoint adjuster, w/o airing louvres 3)
- 0297546 001** Housing cover in pure white, of light metal, w/o setpoint adjuster, w/o airing louvres 3)
- 0297555 001*** Intermediate cover plate in pure white, for large recessed junction boxes (e.g USA)
- 0297560 001*** Intermediate cover plate in pure white for panels, for covering large holes
- 0297557 000*** Wall insulation; prevents imprecision due to draughts from the wall
- 0297760 001** Temperature other than 22 °C for middle of scale (span ± 5 K)
- 0297760 002** Setpoint shift other than ± 6 K or 1 K per 0.1 bar (for 'fixed/schedule' types only)
- 0369573 001*** Surface junction box, pure white
- 0369573 002*** Surface junction box, black

*) Dimension drawing or wiring diagram are available under the same number

- 1) 'Fixed/schedule' requires an external command signal of 0...1.2 bar (e.g RXP 81). Setpoint shift ± 6 K. Setpoint increase: 0.6...1.2 bar = 0...+6 K. Setpoint decrease: 0.6...0 bar = 0...-6 K
- 2) Due to the blow-off noise produced, this value should not be exceeded.
- 3) For orders with controller, the housing will be replaced in the factory.
- 4) See Section 60 on regulations concerning the quality of supply air, especially at low ambient temperatures.

Operation

'Fixed-value' basic function: TSP 80 & TSP 81


The bimetal sensor, which works on the bleed-off force-balance principle, converts the temperature within its P-band into a pneumatic standard signal of 0.2 to 1.0 bar.

Direction of operation A: the output pressure increases as the temperature rises.

Direction of operation B: the output pressure decreases as the temperature rises.


When the temperature is rising, the bimetal strip bends and, via the force-balance lever, exerts a force on the nozzle-ball system. An output pressure – proportional to the force of the lever – builds up between the external pre-valve and the nozzle-ball system. On the model with direction of operation B, the nozzle-ball system is on the other side of the lever.

Instead of the external pre-valve, the models with type number 81 have an integrated pre-amplifier for systems with long lines or for drives with short running times; these require a connection for supply pressure.

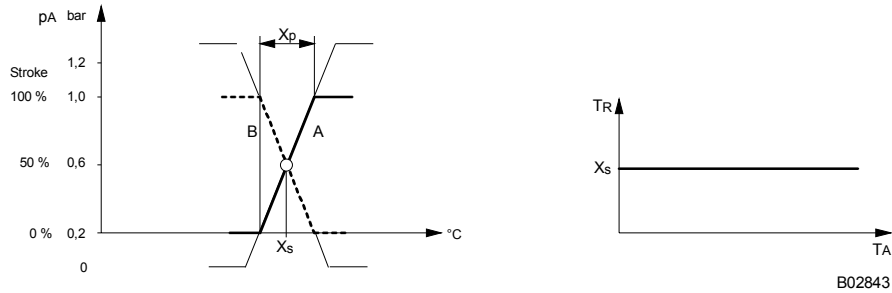


'Fixed-value + schedule' extra function: TSFP 80 & TSFP 81

On this model is a membrane cell below the force-balance lever. When this is pressurised by an external command signal, the setpoint X_S can be shifted. When the command signal is 0.6 bar, then control is performed exactly to the pre-set setpoint. The setpoint increase works on a command signal of 0.6 to 1.2 bar = 0 to +6 K; while the setpoint decrease is 0.6 to 0 bar = 0 to -6 K. Models with this setpoint shift have an 'F' in the model code and require a connection for command pressure.

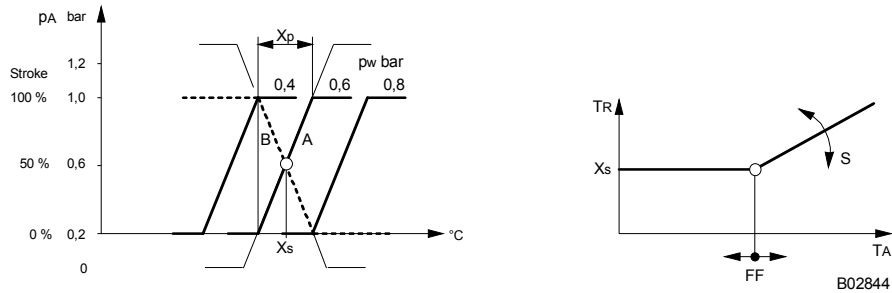

'Sequence' extra function: TSSP 80

This model has a nozzle-ball system on both sides of the force-balance lever. It requires two external pre-valves and has two outputs: one each for both directions of operation (A and B). This provides a sequence curve with the setpoint in the middle of the neutral zone X_t . Models with the sequence function have an additional 'S' in the model code.

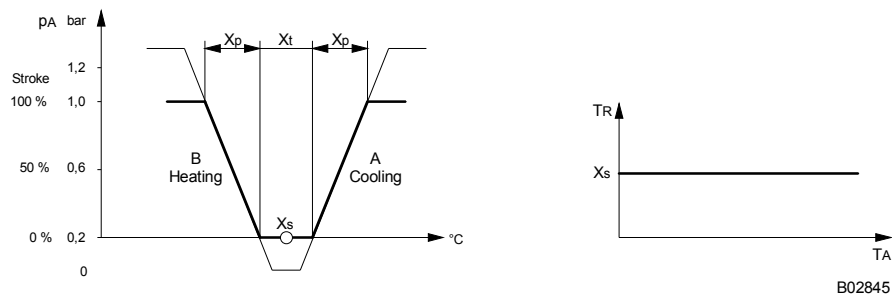

Key

S	= slope, setpoint shift	T_R	= room temperature
FF	= shift starting point, setpoint of the scheduling relay	X_p	= P-band
X_S	= setpoint	X_t	= dead zone
T_A	= outside temperature	p_A	= output pressure
		p_W	= command pressure

Engineering notes

In order to prevent excess noise, the air recovery should be kept to 50 l_n/h for the TS. P 80 and 34 l_n/h for the TS. P 81. This means that the maximum number of RLP units that can be connected to each controller is as follows:-

TS. P 80: either three RLP 10 or 20, or three RLP 100 F00.

TS. P 81: either two RLP 10 or 20, or two RLP 100 F00.

On installations with a re-heater that have been equipped with a sequence relay or sequence-reversing relay (air supplied by the RLP), the air emitted at terminal 6 of the RLP is bled off by the sequence relay or sequence-reversing relay so that no such noise is caused by the TS. P 8 unit itself. The maximum air recovery of a sequence relay or sequence-reversing relay is 50 l_n/h.

For this reason, no more than three RLP units may be connected to such a relay. If more are connected (to either a sequence relay or sequence-reversing relay or a TS. P 8 unit), an interface relay XRP 101 must be used.

Additional details on accessories

0297419 001 Housing cover in pure white, of light metal, screw-type, without setpoint adjuster, without airing louvres, time constant 10 instead of 7 minutes.

0297546 001 Housing cover in pure white, of light metal, screw-type, without setpoint adjuster, with straight airing louvres, time constant approx. 7 minutes.

0297555 001 Intermediate cover plate in pure white, for large recessed junction boxes (e.g USA); includes fitting ring and two screws (M3 × 6, M4 × 16)

0297760 001 Setting limits: middle of scale 15 –40 °C; end of scale 10 –45 °C
For special settings, use full °C values only.

0297760 002 The command pressure can be set between 0 and 1.2 bar. The variable setpoint shift is either 0.5 °C or 0.75 °C per 0.1 bar.

Additional details on models


Housing cover of plastic with slanted air louvres, or metal (see Accessories). Internal setpoint adjustment with end stops and '+ -' scale.

Base plate for snap-on or screw-on housing cover with two Allen-type grub screws (1.5 mm). Types TSP 81 and TSFP 81 have quantity amplification.


Types TSFP 80, TSFP 81 and TSFWP 80 have a connection piece with a membrane for the setpoint shift. Measurement connection for tube of Ø 1.8 × 3.5 mm.

Connection diagrams


TSP 80, TSFP 80

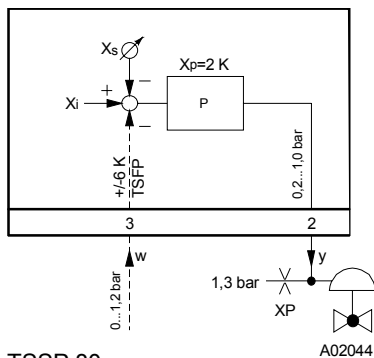

TSP 81, TSFP 81

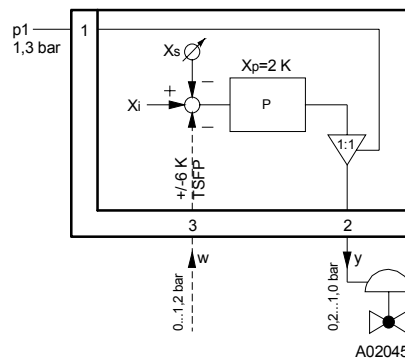

TSSP 80





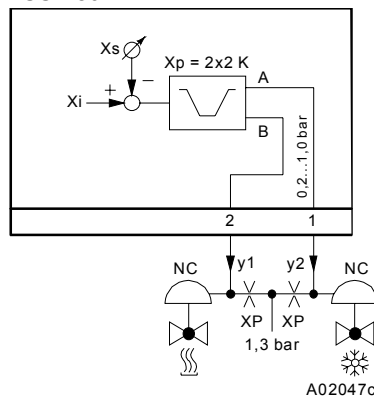


Use NC valves (normally closed)
(e.g. VK18P or BK18P)









Dimension drawing

TS . P 80
TS . P 81

297418/007

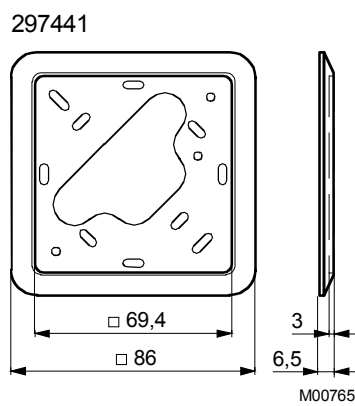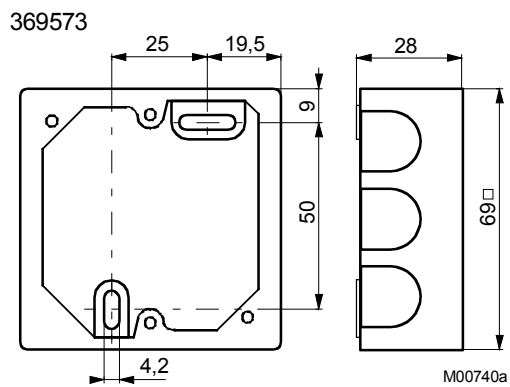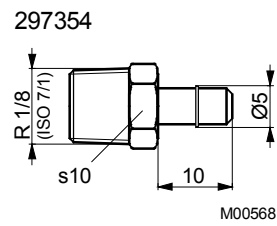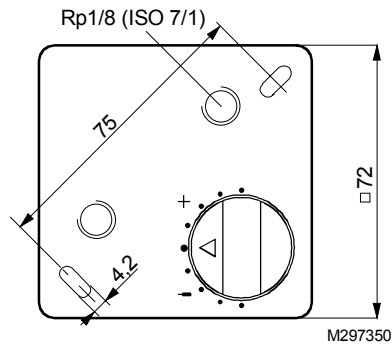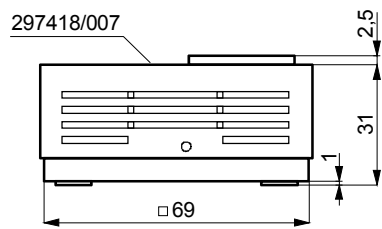


Accessories

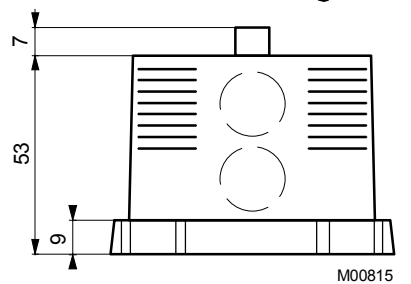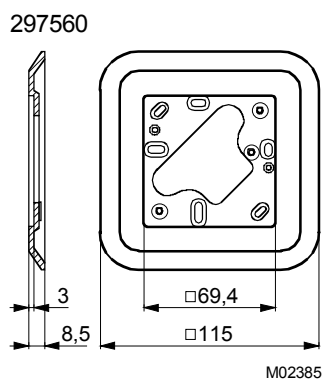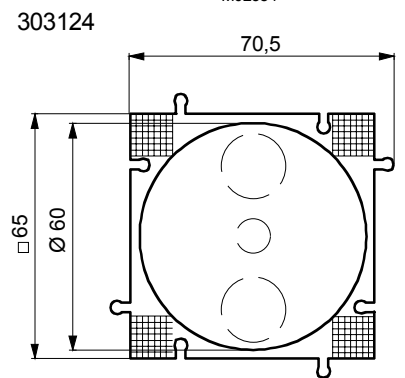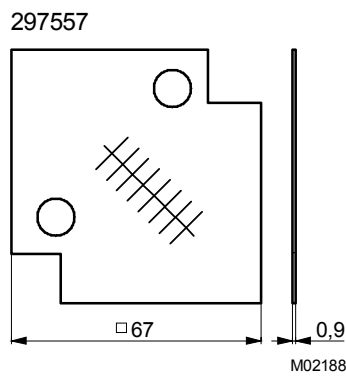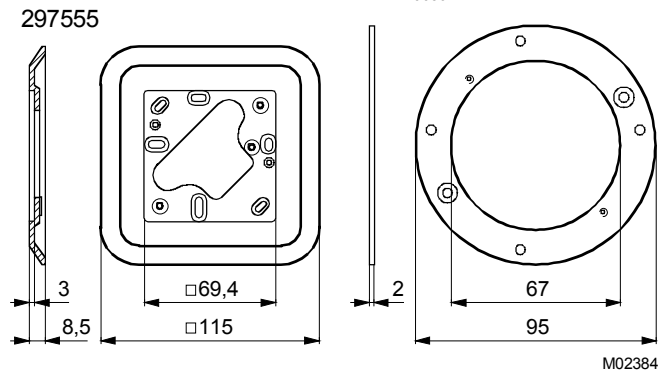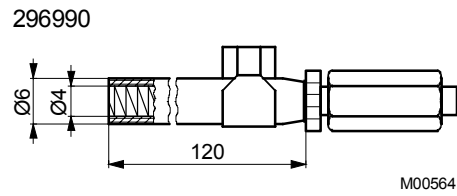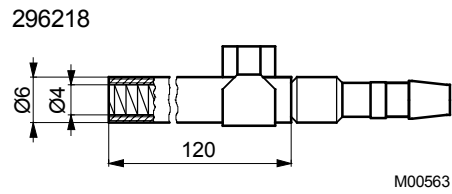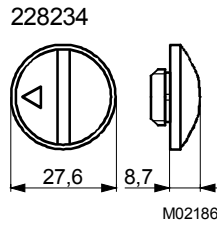


Engineering and fitting notes

To connect the air lines, the short screw-in piece (0297354) must be used. Where space is limited, the use of the buckle-proof adaptor is recommended.


Panel fitting

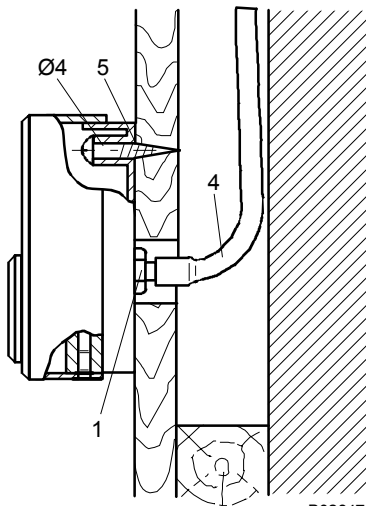

Surface fitting

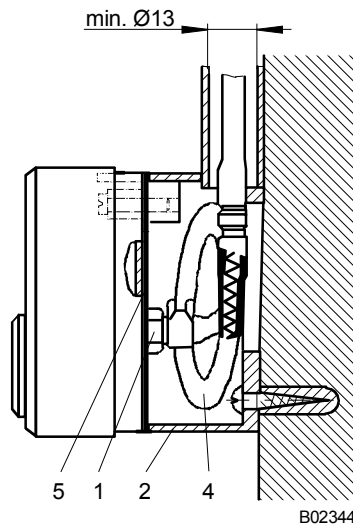


Recessed fitting

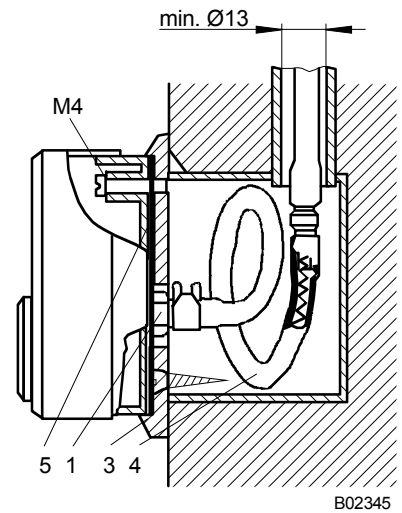


- 1 Short screw-in piece (0297354)
- 2 Surface junction box, pure white
- 3 Intermediate cover plate (0297441)
- 4 Buckle-proof adaptor, plug-in type (0296218)
Buckle-proof adaptor, screw-in type (0296990)
- 5 Wall seal (0297557)

Panel fitting on partition walls (plaster board) with large opening for the compressed-air tube.

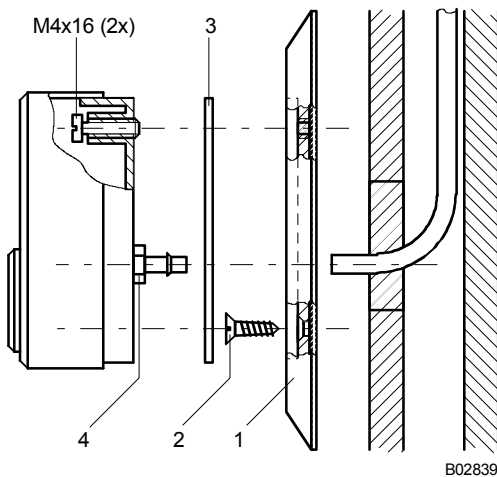

Recessed fitting with large recessed junction box (e.g. for USA)

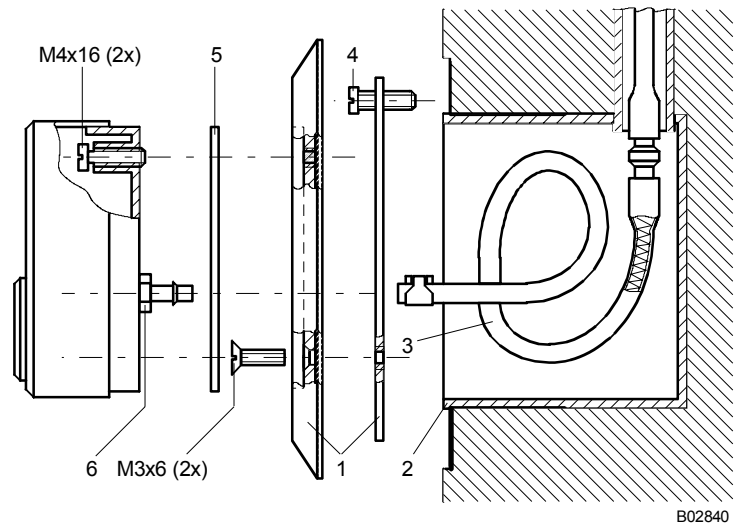


- 1 Intermediate cover plate incl. M 4 × 16 (21) (0297560/001)
- 2 Screws Ø 3.5 (2 ×); not supplied
- 3 Wall seal (0297557)
- 4 Short screw-in piece (0297354)

- 1 Intermediate cover plate incl. M 3 × 6 (2×) and fitting ring 0297555/001
- 2 Recessed junction box; not supplied
- 3 Buckle-proof adaptor, plug-in type (0296218)
- 4 Screws; not supplied
- 5 Wall seal (0297557)
- 6 Short screw-in piece (0297354)

Examples of use

- Feeding a command variable (outside temperature) to several room-temperature controllers of type TSFP. 80, 81

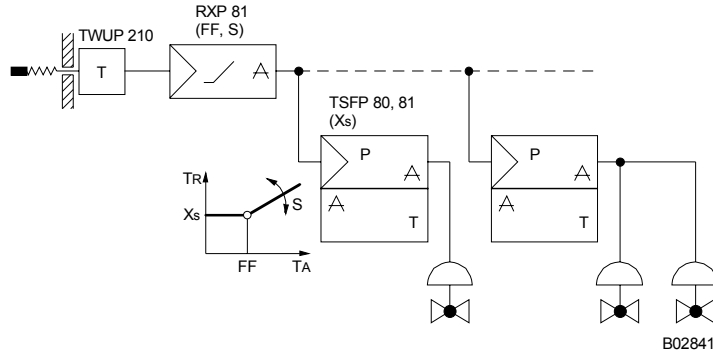

- Feeding a command variable (outside temperature) to a room-temperature controller of type TSSP 80 with two outputs (heating/cooling) for twin-circuit VAV control with several VAV controllers.

